


No.	Component Name	Amount	ComponentNo.	No.	Component Name	Amount	ComponentNo.
1	HexagonScrew	16	PC000102SW	67	SuckerAdapter	1	03T04N
3	HexagonScrew	8	PC000004SW	68	SuckerDisk	1	PA000240
&4	DownBallSeat(S303)	2	PA000009	69	FilteringScreen	1	PB000110
#5	Oring	4	PB000108	&70	FineFilteringScreen	1	PA000244
&6	UpBallSeat(S303)	2	PA000009	71	RetainingRing	1	PA000170
&7	UpBallCover(E)	2	PB000158	72	ReturnTube	1	PB000099
&8	DownBallCover(E)	2	PB000159				
&9	Ball(S316)	4	PA000004				
#10	Pad	2	PB000006				
11	Housing of Pump	2	PA000039				
12	SteelHexagonScrew	2	PC000176				
13	Steel Washer	4	PC000057				
&14	Pad of Diaphragm	2	PA000059				
&15	Diaphragm(U)	2	PB000029				
&17	Pad of Diaphragm	2	PA000059				
#18	Oring	2	PD000011				
19-28	ShaftCover-A Set	1	A16-19-28				
20-28	ShaftCover-B Set	1	A16-20-28				
21-29	AxisSwitch Set	1	A16-21-29				
&22	ShaftOfDiaphragm	1	PA000114				
#23	Pad	2	PB000001				
#24	Oring	2	PD000001				
32	HexagonScrew	4	PC000005SW				
#33	Abnormal Oring	1	PD000140				
#34	Abnormal Oring	1	PD000139				
35-45	Air-Valve Set	1	A16-35-45				
44	BodyOfCylinderBase	1	PA000143				
46	Pipe Set	2	PA000122T				
47	HexagonScrew	8	PC000100SW				
48	BufferPad	2	PD000056				
50	Silencer	1	PB000045				
51	AirPressureRoomOfPump	2	PA000172N				
&53	SlitheryMassValve	1	PB000334				
&54	IncludePly	1	PB000072				
55	DoubleThreadedMaleAdapter	1	X102X2				
56	AirRegulatorValve	1	PA000229				
56-1	Meter	1	PA000165				
&58	DoubleThreadedSwitch	3	PA000167				
59	ThreeWayBronzeTube	1	PA000258				
60	PressureStorage	1	DS-00-R				
61	Bushing	1	1G0302				
&62	45DegreesSwitch	1	PA000168				
63	AdapterOfFlexibleTube	1	PA000257				
64	AdapterOfProtectiveTube	1	PA000233				
65	SpringOfProtective Tube	1	PA000109				
66	FlexibleTube	1	PB000100				

DSP03-ANA-02

Exploded View

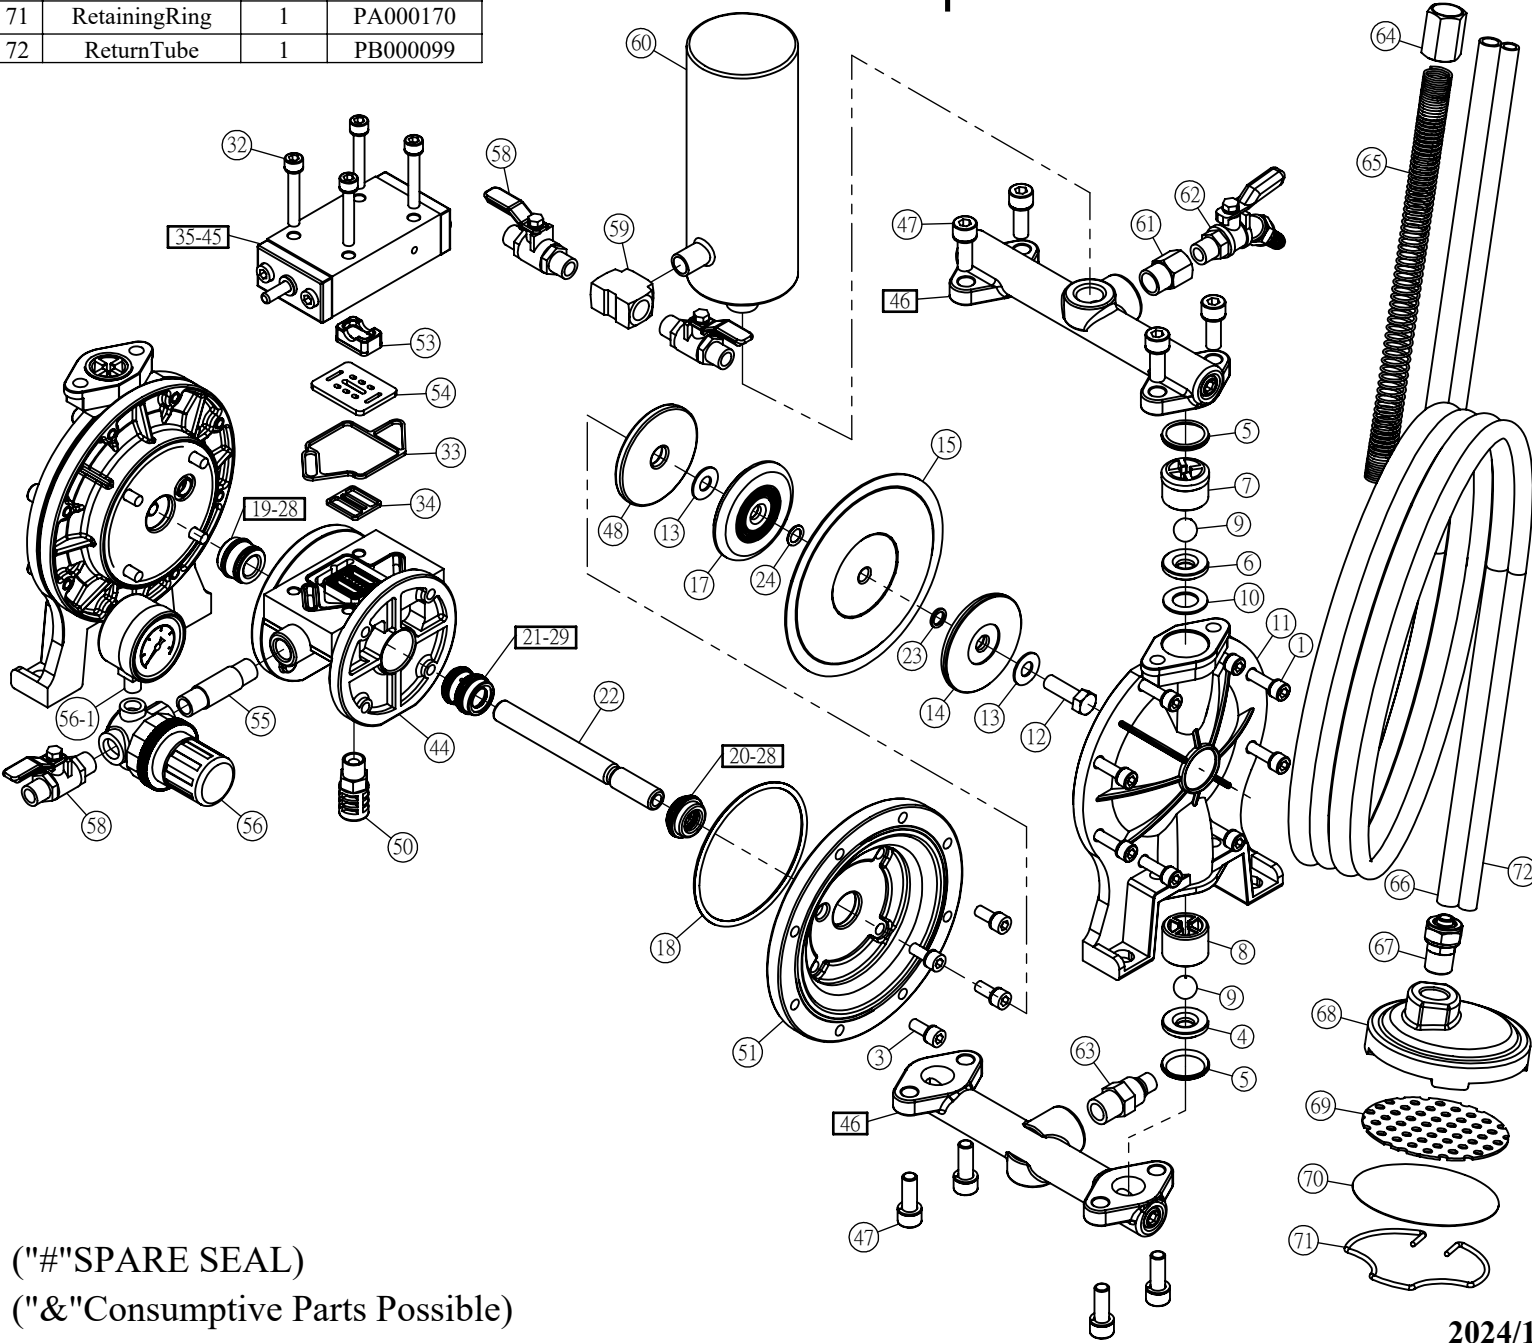


("#"SPARE SEAL)
("&"Consumptive Parts Possible)

DSP03-ANA-02


Exploded View

("#"SPARE SEAL)
("&"Consumptive Parts Possible)


20-28 | ShaftCover-B Set | 1 | A16-20-28

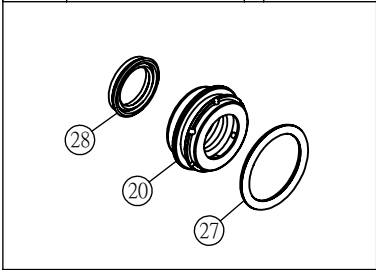

21-29 | AxisSwitch Set | 1 | A16-21-29

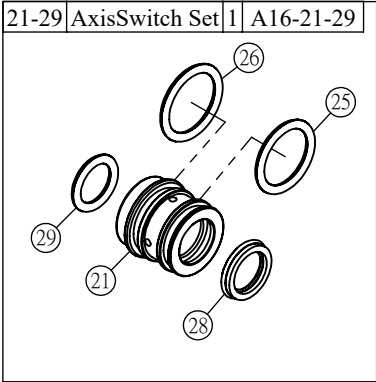


19-28 | ShaftCover-A Set | 1 | A16-19-28

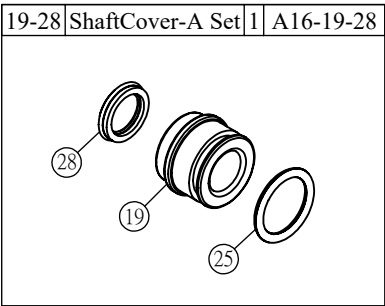

No.	Component Name	Amount	ComponentNo.
19	ShaftCover-A	1	PB000170
20	ShaftCover-B	1	PB000173
21	AxisSwitch	1	PA000150
#25	Oring	2	PD000023
#26	Oring	1	PD000050
#27	Oring	1	PD000054
#28	U-type Oring	3	PDAP0012
#29	Oring	1	PD000111

35-45 | Air-Valve Set | 1 | A16-35-45

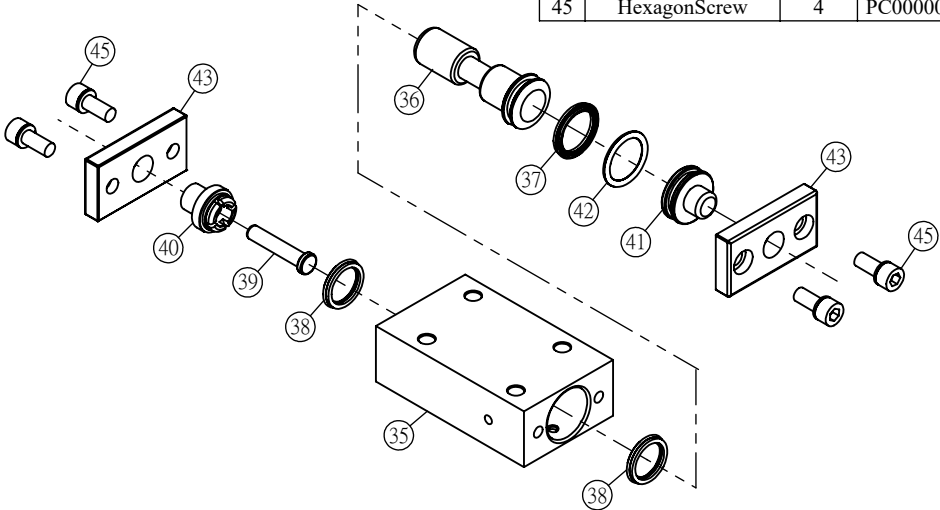

No.	Component Name	Amount	ComponentNo.
&35	BodyOfSequential	1	PA000102
&36	PistonOfAirValve	1	PA000141
#37	U-type Oring	1	PDAP0023
#38	U-type Oring	2	PDR00016
&39	StartingCopperLatch	1	PA000112
40	CoverOfSequential-A	1	PD000080
41	CoverOfSequential-B	1	PB000021
#42	Oring	1	PD000035
43	HousingOfSequential	2	PA000117
45	HexagonScrew	4	PC000004SW