


No.	Component Name	Amount	ComponentNo.	No.	Component Name	Amount	ComponentNo.
1	HexagonScrew	16	PC000102SW	63	AdapterOfFlexibleTube	1	PA000257
3	HexagonScrew	8	PC000004SW	64	AdapterOfProtectiveTube	1	PA000233
&4	DownBallSeat(S303)	2	PA000009	65	SpringOfProtectiveTube	1	PA000109
#5	Oring	4	PB000108	66	FlexibleTube	1	PB000100
&6	UpBallSeat(S303)	2	PA000009	67	SuckerAdapter	1	03T04N
&7	UpBallCover(E)	2	PB000158	68	SuckerDisk	1	PA000240
&8	DownBallCover(E)	2	PB000159	69	FilteringScreen	1	PB000110
&9	Ball(S316)	4	PA000004	&70	FineFilteringScreen	1	PA000244
#10	Pad	2	PB000006	71	RetainingRing	1	PA000170
11	Housing of Pump	2	PA000039	72	ReturnTube	1	PB000099
12	SteelHexagonScrew	2	PC000176				
13	Steel Washer	4	PC000057				
&14	Pad of Diaphragm	2	PA000059				
&15	Diaphram(U)	2	PB000029				
&17	Pad of Diaphragm	2	PA000059				
#18	Oring	2	PD000011				
19-28	ShaftCover-A Set	1	A16-19-28				
20-28	ShaftCover-B Set	1	DS03-20-28				
21-26	AxisSwitch Set	1	DS03-21-26				
22-30	ShaftOfDiaphragm Set	1	DS03-22-30				
#23	Pad	2	PB000001				
#24	Oring	2	PD000001				
#31	Oring	2	PD000006				
32	HexagonScrew	4	PC000005SW				
#33	Abnormal Oring	1	PD000162				
#34	Abnormal Oring	1	PD000161				
35-45	Air-Valve Set	1	DS03-35-45				
44	BodyOfCylinderBase	1	PA000143N				
44-1	CoverOfCylinderBase	1	PA000359				
44-3	HexagonScrew	4	PC000114SW				
46	Pipe Set	2	PA000122T				
47	HexagonScrew	8	PC000100SW				
48	BufferPad	2	PD000056				
50	Silencer	1	PB000045				
51	AirPressureRoomOfPump	2	PA000172N				
&53	SlitheryMassValve	1	PB000334				
&54	IncludePly	1	PB000072				
55	DoubleThreadedMaleAdapter	1	X102X2				
56	AirRegulatorValve	1	PA000229				
56-1	Meter	1	PA000165				
&58	DoubleThreadedSwitch	3	PA000167				
59	ThreeWayBronzeTube	1	PA000258				
60	PressureStorage	1	DS-00-R				
61	Bushing	1	1G0302				
&62	45DegreesSwitch	1	PA000168				

DSP03-ANA-03

Exploded View

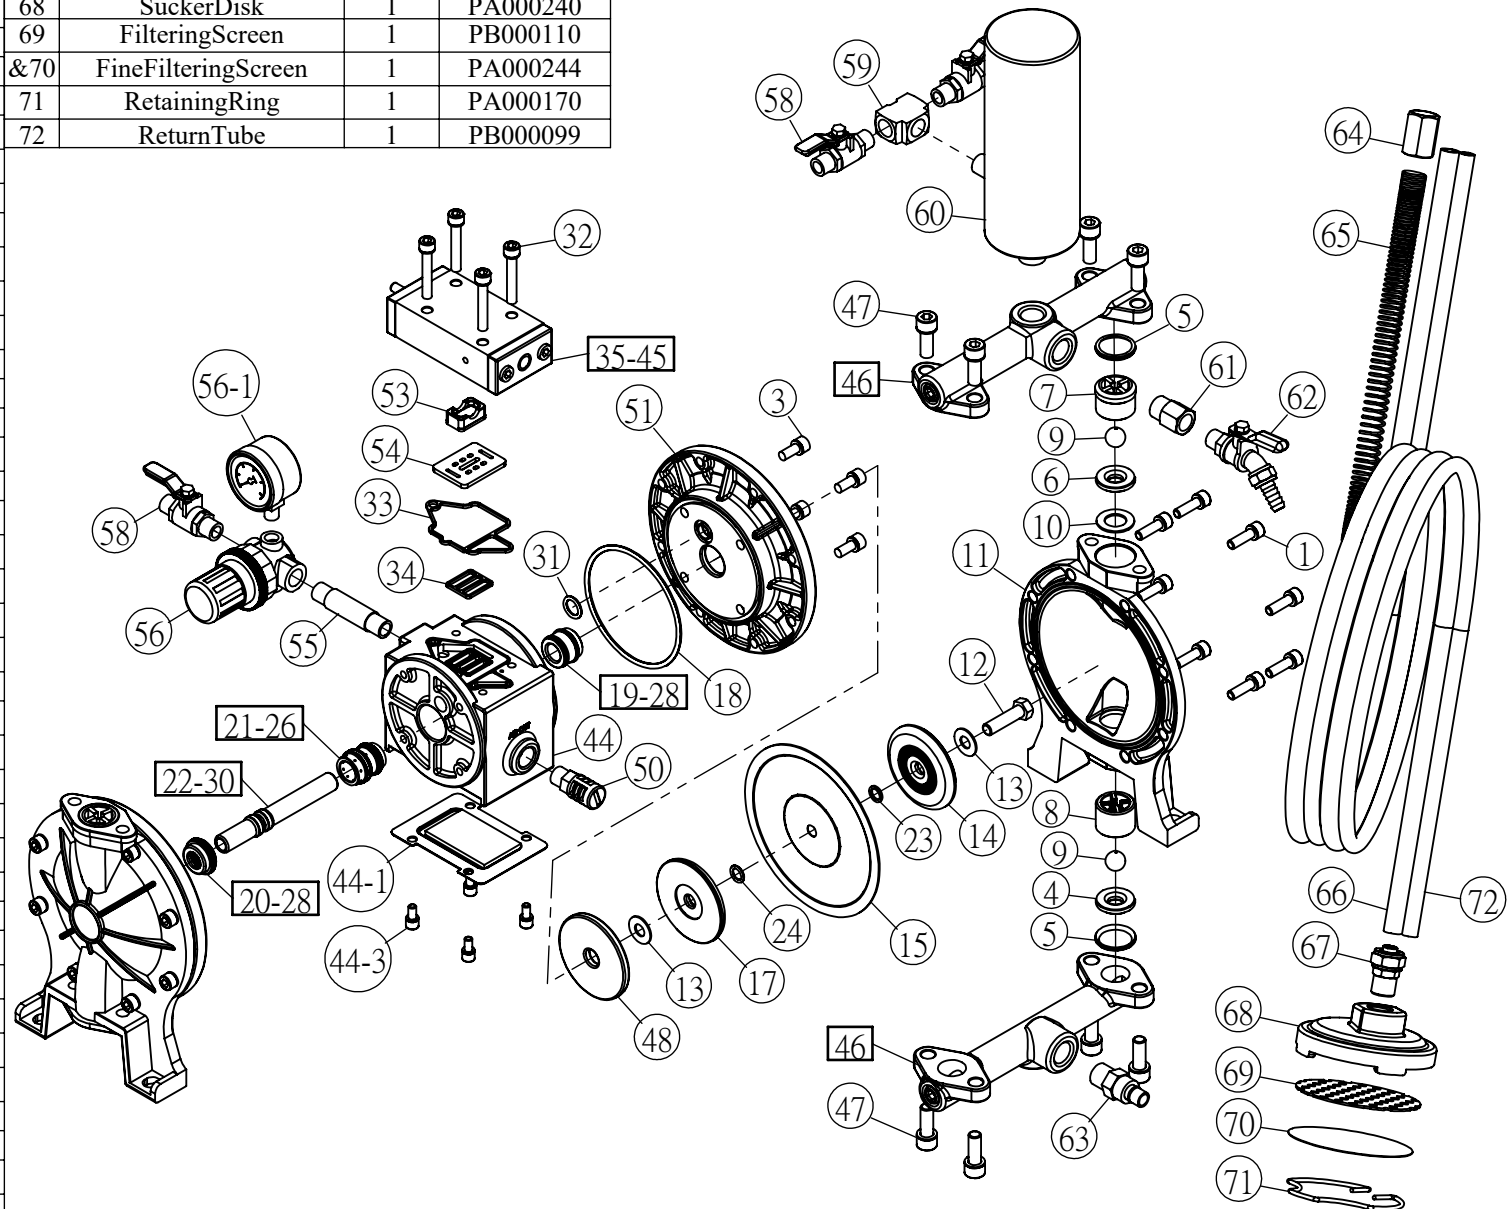

("#"SPARE SEAL)

("&"Consumptive Parts Possible)


DSP03-ANA-03

Exploded View

("#"SPARE SEAL)


("&"Consumptive Parts Possible)

21-26|AxisSwitch Set|1|DS03-21-26

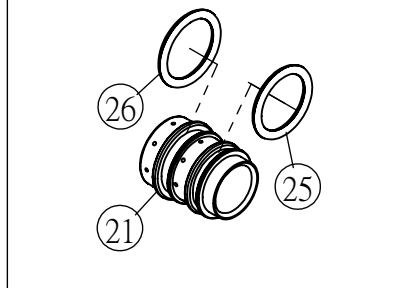


No.	Component Name	Amount	ComponentNo.
19	ShaftCover-A	1	PB000170
20	ShaftCover-B	1	PB000173N
21	AxisSwitch	1	PA000358
&22	ShaftOfDiaphragm	1	PA000357
#25	Oring	2	PD000023
#26	Oring	1	PD000050
#27	Oring	1	PD000054
#28	U-type Oring	2	PDAP0012
#29	Oring	2	PD000057
#30	Teflon Oring	2	PB000224


20-28|ShaftCover-B Set|1|DS03-20-28

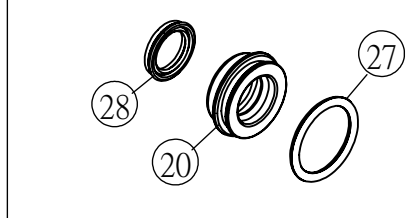

19-28|ShaftCover-A Set|1|A16-19-28

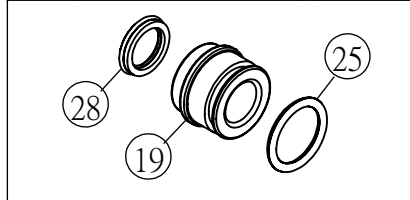

22-30|ShaftOfDiaphragm Set|1|DS03-22-30

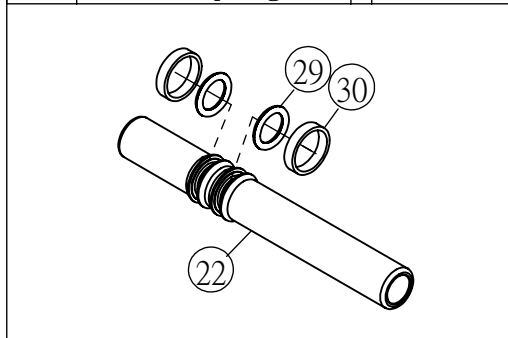

35-45|Air-Valve Set|1|DS03-35-45

No.	Component Name	Amount	ComponentNo.
&35	BodyOfSequential	1	PA000102N
&36	PistonOfAirValve	1	PA000141
#37	U-type Oring	1	PDAP0023
#38	U-type Oring	2	PDR00016
&39	StartingCopperLatch	1	PA000112
40	CoverOfSequential-A	1	PD000080
41	CoverOfSequential-B	1	PB000021
#42	Oring	1	PD000035
43	HousingOfSequential	2	PA000117
45	HexagonScrew	4	PC000004SW

